# 2 Year Limited Warranty

### Please take time to read about the protection we offer you.

All our products come with a guarantee designed to protect you as our valued customer. Zempire® Camping Equipment will repair or replace this product, at their discretion, should it fail due to faulty materials or manufacture for a period of 2 years from the date of purchase.

The Guarantee is subject to the following conditions:

- 1. The Guarantee only applies to an original purchaser who purchased this product in an unopened condition from an approved retail outlet.
- 2. The Guarantee does not apply if the product has been used for anything other than reasonable personal use. Commercial use (e.g. rental) or continuous use are expressly excluded.
- 3. Damage due to normal wear and tear, accident, acts of God, negligence (other than by Zempire® Camping Equipment), failure by the purchaser to ensure instructions for setting up and care are observed, deterioration due to abnormal exposure to ultraviolet light, damage from wind, insects, animals or mold/mildew, or any other cause reasonably beyond the control of Zempire® Camping Equipment are not covered.
- 4. If redress is sought under the terms of this Guarantee, then the product must be returned by the purchaser to the outlet from where it was purchased within the Guarantee period, in a clean, dry state and with proof of purchase.
- 5. All transport costs and any other indirect costs are excluded from the Guarantee.
- 6. Zempire® Camping Equipment reserves the right to make a reasonable charge for repairs which it determines are not within the scope of the Guarantee.
- 7. The Guarantee does not limit, modify or exclude any rights under any law if doing so would contravene that law or make any part of this Guarantee invalid. However, Zempire® Camping Equipment:
  - a) excludes (to the extent permitted by applicable law) all conditions and warranties that might otherwise be implied; and
  - b) limits its liability for breach of any such condition or Guarantee that it cannot exclude together with its liability under the Guarantee, to repairing or replacing the Goods or paying the cost of having the Goods repaired or replaced (at Zempire® Camping Equipment's option).

#### **Australia Only**

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **USA Only**

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

# **Europe Only**

The consumer has legal rights under applicable national legislation governing the sale of consumer goods and those rights are not affected by the guarantee.

All warranty claim processes are explained on our Zempire® website. Please go to **www.zempire.co.nz**, select your location and follow the instructions to lodge a warranty claim.

#### International Distributors:

#### New Zealand & Australia

Zempire® Camping Equipment 6 Karewa Place, Pukete, Hamilton, 3200, New Zealand Ph: +64 7 848 1610

#### United Kingdom, Belgium, Netherlands & Luxembourg

Outdoor & Sports Company Ltd. Redfern House, Dawson Street Hyde, Cheshire, SK14 1RD, UK Ph: +44 161 366 5020

#### **North America**

Outdoor & Sports Company Inc. 610 Alden Road Unit 101 Markham, ON, L3R 9Z1, Canada Ph: +1 905 940 9511

#### Germany, Austria, & Switzerland

Sport-tech Goldbeckstrasse 6 69493 Hirschberg, Germany Ph: +49 6201 8439710

#### South Korea

Coldspin Corporation 20 Gurodong-ro 15-gil Guro-gu, Seoul, South Korea Ph: +82 2 3397 7711

Designed and tested in New Zealand. Made with care in China.



# INSTRUCTIONS



#### PRO LINKS AND PRO TENTS

Pro III/II<sup>v2</sup> Aerobase Link – Pro III<sup>v2</sup> and Pro III<sup>v2</sup>
Pro TXL<sup>v2</sup> Aerobase Link – Pro TXL<sup>v2</sup>
Pro TL<sup>v2</sup> Aerobase Link – Pro TL<sup>v2</sup>
Pro TM<sup>v2</sup> Aerobase Link – Pro TM<sup>v2</sup>

### **AEROBASE AIR SHELTERS**

Aerobase 3 Aerobase 3 Pro




## INSTRUCTIONS

This Aerobase Pro Link provides a weather tight connection between a Pro Series tent awning and an Aerobase 3 or Aerobase 3 Pro Air Shelter.

- 1. Pitch your tent.
- 2. To attach the Pro Link, start by laying the link on the ground with the outside facing up, check that the directional arrow on the link is pointing towards the tent. The zip sliders should be located on the left-hand side of the link looking into the tent. Feed the zip tail on the tent zip through both zip sliders on the link and gently begin zipping the link to the tent using the uppermost zip slider. Be sure to lift the link to the tent as you are zipping to avoid any damage to the zip or zip slider.
- 3. Pitch your **Air Shelter** in front of your tent awning and in line with the **Pro Link** but do not place any of the pegs in the ground yet.
- 4. Zip the remaining side of the **Pro Link** to the entrance of the **Air Shelter.**
- 5. Move the air shelter so that the **Pro Link** is pulled trim/tight and aligned straight with the awning of your tent. Ensure the walls of the shelter sit square (pictured below).
- 6. Once correctly aligned, peg down the Air Shelter into position.

#### **Pack Away**

- 1. When packing away your **Pro Link** check the outside of the link to be sure that the fabric is clean (remove any bird droppings etc) and is totally dry before taking down.
- 2. Un-zip the link from the tent and shelter, then lay flat on the ground.
- 3. Fold the link lengthways to 2/3rds the width of the storage bag. Roll the link tight.
- 4. Secure with supplied webbing strap and place into the carry bag.

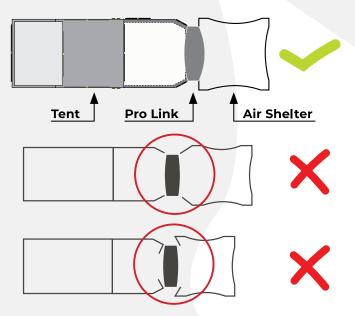

### CARE INSTRUCTIONS

- 1. Never pack your Aerobase Pro Link away wet. If you must take your Aerobase Pro Link down when wet, ensure that it is dried completely as soon as possible to prevent mildew forming.
- 2. If mildew does form on your Aerobase Pro Link, wash off with warm water and a soft brush to prevent further growth. Do not use soap or detergents.
- 3. This Aerobase Pro Link is not designed to withstand storm conditions. During a severe storm, it is recommended that the Aerobase Pro Link be taken down.
- 4. Do not leave your Aerobase Pro Link connection pitched unnecessarily for extended periods of time. UV light damages the fly and will shorten the life of your setup.

#### Condensation

It is important that lower vents on your tent are opened at all times to reduce the risk of condensation. During humid or damp conditions, it is recommended that the window covers are opened to expose the mesh layer, enabling additional airflow throughout your tent. Do not use foam swabs or non-bonded mats directly on the tent floor. This will cause condensation between the mat and floor and if not dried out, can lead to mildew forming.

#### **UV Degradation**

Tent/link fabrics can be weakened by prolonged exposure to sunlight. Under normal holiday use, your Zempire® tent/link will give you many years of camping enjoyment. However, extended use in strong sunlight will cause degradation. It is recommended that during extended periods of strong sunlight a Zempire® Roof Cover is used to help protect from UV damage. UV degradation is not covered under warranty. The warranty does not cover permanent sites, displays or commercial use.

# **NEED HELP WITH YOUR TENT/LINK?**

We have a range of videos on our website which can help you.

Follow the QR code or type the link below in your browser. We suggest to check out our videos beforehand in case you don't have service at your holiday destination.





ZEMPIRECAMPING.INFO/VIDEO-GALLERY

For a detailed description of all the features and specifications please visit our website.

